

<http://www.evolvednovelties.com/>

EVOLVED
Love is Back



Product Specifications:

Material: Silicone & ABS Plastic

Battery: 502030 250mAh

Voltage: 3.7V

Number of Vibrations:

5 Suction & 8 Vibrating

User time: 60 minutes

Sound Level: 55dB

CHARGING INSTRUCTIONS

This vibrator arrives with partial charge, so it is recommended to charge fully before first use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger onto the toy's magnetic charging pins, located at the center back of the main shaft.

Initial charge will take about an hour to complete and subsequent charges will take 2 hours.

The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 90 minutes of play time on the lowest level of vibration, and about 60 minutes on the highest level.

This toy operates at a sound level of about 55db with 250 mAh lithium battery at a voltage of 3.7.

ATTACH USB CHARGER TO PRONGS



INSTRUCTIONS FOR USE

This dual function toy is operated with an easy-to-use 2-button panel located on the front center of the main shaft. Each button controls a separate motor with its own on/off function.

The top button controls the suction function at the side of the wand head. Press for at least three seconds to engage the suction motor. The LED light will begin to flash in a circle around the suction hole in blue, green & red, and the motor will begin in standby. Click again more quickly to cycle through a total of 5 speeds and functions, as well as standby. Press again for at least three seconds to turn off the suction function motor.

The bottom button controls the vibration motor in the wand head. Press for at least three seconds to engage the vibration motor. The LED light will go on and the motor will begin in standby. Click again more quickly to cycle through a total of 8 vibration speeds and functions as well as standby. Press again for at least three seconds to turn off vibration in wand head.

USB RECHARGEABLE