

Cupcake

USAGE

- To turn the device on press the button for 3 sec.
- Click the "lips" button to activate the vacuum-wave function and to change its modes
- Click the "vibration" button to activate the vibration function and to change its modes
- For the most comfortable use, we recommend adding lubricant (avoid oil-based lubricants, they can damage the material).
- To turn the device off press the button for 3 sec.

STORAGE

Store the product in a dust-free place in a special eco-bag that goes in a kit. Avoid direct sunlight and do not expose it to extreme heat.

CARE

Please always clean the product before and after each use. Wash it with water and soap or toy cleaner, pat it dry with a lint-free towel. Do not use cleaners containing alcohol, petrol or acetone.

CHARGING

- Insert the USB end of the power cable into a USB port, connecting magnetic charging.
- The LED lights will be flicker to indicate that the product is charging, when it is fully charged, the light will be stop blinking.
- DO NOT use the product while charging.
- Please try to use the original power cable only and an excellent quality USB adapter.