




BE YOUR LOVER
ビーユアラバー

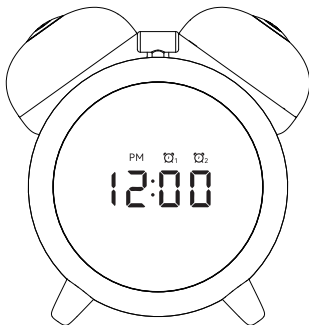

Naughty Clock
User Manual

Before Use

Please fully charge our product before the first use. The charging time is about 1.5 hours, after it's fully charged, the LED light will stay on.

Please remove piercings or jewelry in the nipple, genital, and other areas before use. Be sure to clean and disinfect the product before use. If you want to use a lubricant please adequately lubricate the product and your private parts with a water-based lubricant.

Product Specification

Product Name: Naughty Clock

Product No.: VA617A

Material: Silicone, ABS

Size: 108*103*59mm (Clock)

104*49*40mm (Vibration Wand)

48*49*40mm (Suction Stimulator)

Weight: 230g±5g

Battery Type: Polymer lithium battery

Battery Capacity: 210mAh

Charging Voltage: 5V

Charging Current: 200mA

Charging Time: ≤1.5H


Working Time: ≥40Min

Suction Mode: 8

Vibration Mode: 9

Waterproof repellency: IPX6

Button Display

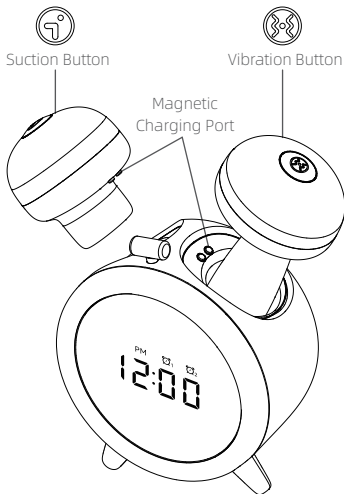

How to Use

Suction Mode

Press the button “” for 1.5s to turn on/off the suction mode.

Click the button “” to switch 8 different suction modes.

Vibration Mode

Press the button “” for 1.5s to turn on/off the vibration mode.


Click the button “” to switch 9 different vibration modes.

LED Display

Working	LED remains on
Low battery	LED flashes
Charging	LED flashes
Fully Charged	LED remains on

Alarm Clock Instructions

Button Display

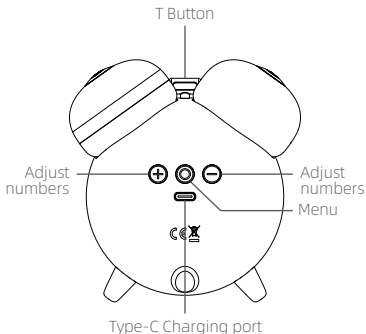

Setting the Time

1. Press and hold "  " to make the first digit flash.
2. Press "  " or "  " to select the desired number.
3. Press "  " briefly to move to the next digit and repeat.
4. After all digits are set, press "  " once to confirm, or wait 10 seconds for auto-confirmation. To cancel, double-press "  " .

*Numbers above 12 will switch from AM to PM.

Sleep Mode

- The device enters sleep mode every 30 minutes. Press any button to arouse it.
- To manually activate sleep mode, press and hold "  " for 2 seconds.

Alarm Setting

1. Double-press "  " to enter the setting for the first Alarm  (both "  " and numbers will flash).
2. Adjust the numbers with "  " or "  " and move between digits by pressing "  " .
3. Once done, press "  " to confirm.
4. Double-press "  " again to set the second Alarm

 using the same method.

※After setup, both  and  icons will light up.

Turning Off Alarms

●To cancel all alarms, press and hold “” for 2 seconds ( and  icons will disappear).

●When the alarm rings, press any button to snooze for 10 minutes (up to 3 times).

●To stop the alarm completely, double-press “”.


Cleaning and Maintenance



Only vibration and suction stimulators can be washed.



Please do not immerse it in water for a long time.



After cleaning and drying the toy, please store it away from high humidity and direct sunlight.



The clock is not waterproof, please do not wash it.

Usage Instructions

Before using this product, please read this instruction manual thoroughly and understand the usage precautions, product features, and methods to ensure correct and safe use. Additionally, keep this manual in a safe place for future reference.

- Clean the product thoroughly before use with a water-based lubricant.
- If not used for a long time, clean it well and store it away from direct sunlight, high temperatures, and high humidity.

Charging

- Always use a standard charging AC adapter and the included charging cable. The fast-charging adapter may cause the built-in battery to deteriorate or fail to charge fully.
- Make sure the connection part does not get wet during charging.
- Ensure the charging time does not exceed 12 hours and monitor the charging process closely.
- Do not use the product while charging.

Maintenance

This product complies with the international waterproof standard and can withstand high-pressure water flow from any angle. Submerging it in water may cause malfunction. Wipe off any moisture and dry it completely after rinsing.

- If not used for a long time, store it away from high humidity and direct sunlight.
- Before the first time or after a long period of non-use, make sure to charge it once fully.

Warning

- As this is an adult product, keep it out of reach of children.
- If you experience skin allergies or discomfort while using the product, stop using it immediately and consult a doctor if necessary.
- If you find any malfunction or abnormal behavior, stop using it immediately and turn off the power.

Disposal

- This product contains a lithium-polymer battery. Do not dispose of it as household waste. When disposing, remove the battery and follow the disposal methods prescribed by your local authorities.

使用前

初めてお使いになる際は必ずフル充電を行ってからご使用ください。充電時間は約1.5時間で、フル充電するとLEDランプが点灯します。

本製品を使用する前には、乳首や性器などのピアスやアクセサリを取り外して、本製品を洗浄・消毒してからご使用ください。ローションを使用する場合は、水溶性ローションで製品とプライベートパーツをよく潤滑してください。

製品仕様

商品名: めざめちゃん

型番: VA617A

材質: シリコン、ABS

サイズ: 108*103*59mm (時計)

104*49*40mm (パイプレーター)

48*49*40mm (吸引口)

重量: 230g±5g

電池種類: リチウムポリマー電池

電池容量: 210mAh

充電電圧: 5V

充電電流: 200mA


充電時間: 約1.5時間

稼働時間: 約45分


吸引モード: 8種類

振動モード: 9種類

防水レベル: IPX6

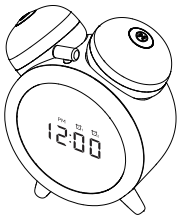

ボタンについて

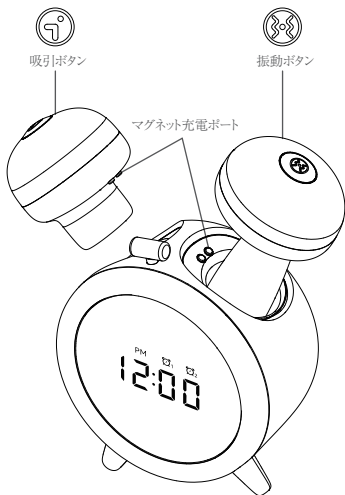

使い方

吸引モード

「」を1.5秒長押しすると、吸引モードのオン/オフができます。

「」を短く押すと、8種類の吸引モードが切り替わります。

振動モード

「」を1.5秒長押しすると、振動モードのオン/オフができます。


「」を短く押すと、9種類の振動モードが切り替わります。

LED表示状態

動作中	LED点灯
電池残量低下	LED明滅
充電中	LED明滅
充電完了	LED点灯

アラーム時計の取扱説明書

ボタンについて

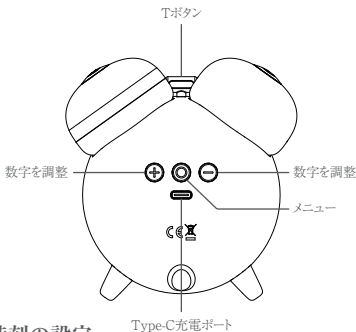

時刻の設定

- 「」 ボタンを長押しすると、時刻の設定画面に入ります(数字が点滅)。
- 「」 「」 ボタンで時間を調整し、「」 ボタンを短押しで次の桁に移動します。
- 設定が終わったら、「」 を1回押して確認するか、10秒待つと自動確定されます。

- 設定を取り消すには、「」を2回押します。

注意:12以上の数字はAM/PMが自動的に切り替わります。

スリープモード

- 自動スリープ:30分操作しないと、自動的にスリープモードになります。
- 手動スリープ:「」を2秒間長押しします。
- 解除:任意のボタンを押すと再び起動します。

アラームの設定

- 「」を2回押すと、アラーム ₁ の設定モードになります(数字が点滅)。
- 「」「」で時間を調整し、「」を押して桁を移動します。
- 設定が完了したら、「」を押して確認します。
- アラーム2の設定:「」を再度2回押して、同じ手順で設定します。

※設定後:「 ₂」のアイコンが点灯します。

アラームのオフ

すべてのアラームをキャンセルする:「」を2秒間長押しします(アイコンが消えます)。

アラームが鳴ったら:

●任意のボタンを押すと10分間スヌーズします(最大3回まで)。

●アラームを完全に停止する:「」を2回押します。


お手入れとメンテナンス



吸引機能付きおよび振動機能付きの部分は、防水仕様のため洗浄可能です。



製品を水中に長時間浸けないでください。



使用後は、製品を清掃し十分に乾燥させた後、高湿度や直射日光を避けて保管してください。



時計本体は防水仕様ではありませんので、水洗いは避けてください。

ご使用上の注意事項

この製品をご使用になる前に、必ずこの取扱説明書を最後までよくお読みいただき、使用上の注意事項、本製品の機能や使用方法などを十分に理解して、正しく安全にご使用いただくようお願いいたします。また、この取扱説明書は大切に保管していただき、今後の参照のためにお手元に置いておくことをおすすめします。●使用する前に製品をきれいに清潔し、水溶性ローションと合わせて使用してください。●長時間に使用しない場合はよく洗浄し、専用の収納袋に収めてから、直射日光のあたる場所や高温、多湿になる場所を避けて保管してください。

充電について

●充電する際は必ず通常充電仕様のACアダプターと付属の充電ケーブルをご利用ください。急速充電仕様のものをご利用する場合は、製品の内蔵電池が劣化されたり、フル充電できなかつたりする恐れがあります。●充電時は接続部が濡れないようにご注意ください。●充電時間は12時間を超えないように注意してください。また充電する際は必ず目を離さず、注意監視してください。●充電しながらでのご利用はお止めください。

メンテナンス

●本製品は生活防水仕様のため、水中でのご使用はお避け下さい。浸水すると故障する恐れがあります。挿入部分は丸洗い可能ですが、吸引口はウェットティッシュで汚れを拭き取ってください。もしくは吸引口を水で洗浄後、綿棒などで吸引口の水をよく拭き取ってから、直射日光の当たらない所で保管してください。●初めてご利用するときや長期間ご使用しなかった時は必ず一度満充電にしてからご利用ください。

警告

●アダルトグッズのため、幼児の手の届かないところに保管してください。●本製品を使用中に皮膚アレルギーや不快感を感じた場合は、直ちに使用を中止し、必要に応じて医師の診察を受けてください。●故障が見つかったり、異常な動作を感じたら、直ちにご使用を中止し、電源を切ってください。

廃棄物処理

●本製品はリチウムポリマー電池を内蔵しております。家庭ごみとして、処理しないでください。廃棄する場合は、電池を取り出してから各自治体の処理方法に従ってください。

使用前

在第一次使用前,請將產品充滿電。充電時間約為1.5小時,充滿電後LED長亮。

使用前請將乳頭、生殖器和其他部位的穿孔或首飾摘下並對產品進行清潔和消毒。如使用潤滑液,請用水溶性潤滑液充分潤滑產品和您的私處。

產品規格

產品名稱: 大人鈴

產品型號: VA617A

材質: 矽膠, ABS

尺寸: 108*103*59mm (鬧鐘)

104*49*40mm (振動棒)

48*49*40mm (吮吸口)

重量: 230g±5g

電池類型: 充電式聚合鋰電池

電池容量: 210mAh

充電電壓: 5V

充電電流: 200mA


充電時間: ≤1.5小時

使用時間: ≥40分鐘


吮吸模式: 8種類

振動模式: 9種類

防水等級: IPX6

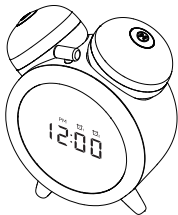

按鍵解析

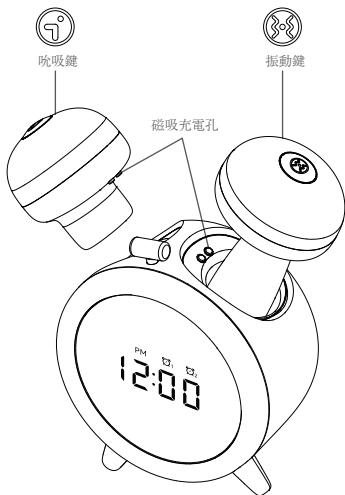

如何使用

吮吸模式

長按「」鍵1.5 秒,開啟/關閉吮吸模式。

點選「」鍵可切換 8 種不同的吮吸模式。

振動模式

長按「」鍵1.5 秒,開啟/關閉振動模式。


點選「」鍵可切換 9 種不同的振動模式。

LED顯示狀態

工作中	LED長亮
低電量	LED閃爍
充電中	LED閃爍
充滿電	LED長亮

鬧鐘說明

按鍵解析

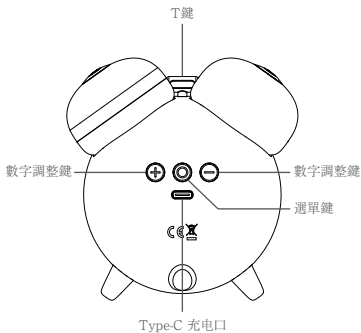

時間調整

1. 長按「」鍵,第一個數字閃爍。
2. 短按「」或「」鍵選擇所需數字。
3. 選定後再短按「」鍵跳轉下個數字並依序設定。
4. 全部設定完成後點選「」鍵確定;或靜等10秒自動確認。雙擊「」鍵取消。

*數字超過12時,AM轉為PM。

休眠

- 每隔30分鐘進入休眠狀態,期間按任意鍵可喚醒。
- 長按「」鍵2秒進入休眠狀態。

鬧鈴設定

1. 雙擊「」鍵,進入第一個鬧鈴  的時間設定( 和數字同時閃爍)。
2. 短按「」或「」鍵選擇所需數字;選定後再短按「」鍵跳轉下個數字並依序設定。
3. 全部完成後點選「」鍵確定。
4. 再次雙擊「」鍵可進入第二個鬧鈴  的時間設置,操作同鬧鈴1一致。

*設定完成後,  和  圖示亮起。

關閉鬧鈴

●長按「」鍵2秒取消所有鬧鈴設定(和圖示消失)。

●鬧鈴響時,點選任意鍵可暫停並在10分鐘後再次響起,連續3次後停止。或雙擊「」鍵徹底停止鬧鈴。


清洗維護



吮吸口和振動棒符合國際防水標準,可完全沖洗。



請勿長時間浸泡在水中。



清洗後擦乾玩具並存放於陰涼通風處,避免陽光直射。



鬧鐘本體不防水,請勿清洗。

使用注意事項

在使用本產品之前,請務必仔細閱讀本使用說明書的所有內容,充分理解使用注意事項、本產品的功能及使用方法,以便正確安全地使用本產品。另請妥善保管本使用說明書,以便日後參考。

- 使用前請將產品清潔乾淨,並搭配水溶性潤滑液使用。
- 長時間不使用時,請徹底清洗,避開直射陽光、高溫和高濕度的地方保存。

關於充電

- 充電時請務必使用標準充電規格的AC適配器和附帶的充電線。使用快速充電規格的充電器可能會導致內置電池劣化或無法完全充電。
- 充電時請注意不要讓接頭部分弄濕。
- 請注意充電時間不要超過12小時,充電時請勿離開並注意監控。
- 請勿在充電時使用本產品。

維護

本產品符合國際防水標準,可以防止各種角度的高壓水流。浸水可能會導致故障。清洗後請擦乾水分並待其完全乾燥。

- 長時間不使用時,請避開潮濕和直射陽光的地方存放。
- 首次使用或長時間未使用後,請先將電池充滿電後再使用。

警告

- 由於是成人用品,請放置在兒童無法觸及的地方。
- 使用過程中如果感到皮膚過敏或不適,請立即停止使用,並在必要時諮詢醫生。
- 如果發現故障或異常情況,請立即停止使用並關閉電源。

廢棄物處理

- 本產品內置鋰聚合物電池,請勿作為家庭垃圾處理。廢棄時請取出電池,並按照各地方自治體的處理方法處理。





BE YOUR LOVER
Lovely present.

